



Wall Mount Linen Cabinet Installation Instructions

Other installation instructions available
at www.woodpro.com

Tools and Supplies Needed:

Tools

- Level
- Tape measure
- Cordless drill

Supplies

Hardware Bag containing:

- Wood Screws
- 3 1/8" Bracket Screws
- Hardware-if not factory installed

Properly Braced Wall

- See Step 1.

Directions:


1. Ensure the wall is properly braced.

- Center a 2"x 6" brace 64" above the floor. *It must be cut into the wall studs and long enough to attach to a stud on each side of the cabinet.*
- Center a second 2"x 6" brace 33" above the floor. *Same length as above.*
- Attach braces to studs according to local building codes. *If no code applies, attach the braces to **each** stud with at least two 16-penny framing nails. Braces may be larger than 2"x 6".*
- Install cabinet hardware if not already factory installed.
- Finish wall with appropriate wall covering.



Warning!

The horizontal wall braces are required. Failure to properly brace the wall will result in out-of-warranty product failure, and **possibly injury or death.**

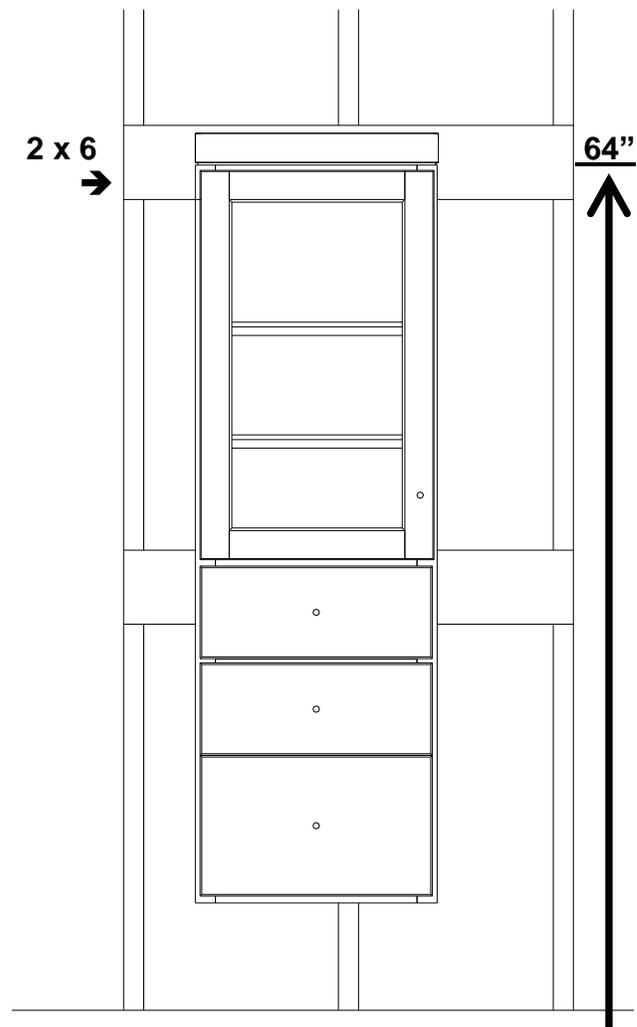

2. Remove Cabinet from the Carton.

- Remove loose items, crown and drawers

3. Install Support Strip.

- Mark the center of the Support Strip
- Mark the wall where the center of the cabinet will be placed.
- Mark a spot 9 ½" above the floor.
- Position the **top** of the Support Strip on the mark.
- Line up the mark on the Support Strip with the mark on the wall.
- Screw one side of the Support Strip into a stud.
- Check Support Strip for level.
- Screw the other side of the Support Strip into a different stud.

Photo Note: The yellow arrow is 9 ½" above the floor. The cabinet rests where the level is shown.



4. Set the cabinet on the Support Strip



Use a competent assistant. Lifting heavy, oversized items can cause serious injuries.

5. Install six of the 3 1/8" screws in each Metal Bracket.

- Attach to the Horizontal Brace inside of the wall.



6. Install a 3 1/8" screw behind the top drawer.

- Screw into the lower wall brace centered 33" above the floor.

Important! It prevents people from lifting the bottom of the cabinet away from the wall.

7. Remove the Support Strip and retouch wall as needed.

- Optional. Leave the Support Strip if you wish.



8. Install remaining items.

- Crown instructions included separately.