




J-Arm Light Front Replacement

Tools and Supplies Needed:



- Phillips screwdriver or power drill with Phillips screwdriver tip
- Tape Measure
- 2- 4 (depending on the size of the cabinet) 3 1/8" screws (included)

Safety First

- Secure all parts firmly to prevent injury.
- Keep hands at a safe distance from power tools.
- Wear safety glasses at all times while replacing parts.
-  Shock Hazard possible.


Removal Procedures

* *These procedures are for light front attached with snap in plastic clips*

1. Turn off the main breaker panel that supplies power to your bath cabinet light.
 - Check light switch to ensure power is off before proceeding to Step 2. 
2. Remove the globes and light bulbs. Grasp the light front firmly to avoid dropping it.
3. Pull straight out on light front until it pops loose from clips.
4. Unhook all electrical wires. Please note how it is wired so that when replacing with the new front you will be able to easily attach the electrical wires. If unsure, please refer to our wiring instructions included. 
5. Remove all screws attaching the light front safety wire to the inside of the metal box using a Phillips screw driver.
 - Lay light front aside.
6. Remove all remaining screws that attach the metal light front box to the cabinet using a Phillips screw driver.
 - Lay metal light front box aside.
7. Remove all screws that attach the four plastic clips to the cabinet using a Phillips screw driver.
 - Discard the clips.

Installation Procedures

8. Use a power drill with a Phillips screwdriver tip to insert the 3 1/8" screws provided approximately 1" into the top of the cabinet.
 - All screws should be evenly spaced across the cabinet, with each outside screw being no less than 6" from each outside edge of the cabinet.
 - All screws should be a distance of 1 1/8" – 1 1/4" from the face of the cabinet.

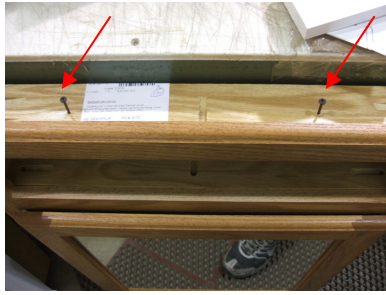

Cabinet without crown molding



Cabinet with crown molding

9. Wire the new light bar to the electrical wires inside the wall the same way they were wired before. If unsure, please refer to our wiring instructions included.



10. Slide the new light front assembly into the light front opening of the cabinet.



- Hold light front assembly firmly in place.

11. Drive the 3 1/8" screws the rest of the way into the cabinet.
 - These screws should go down into the plywood strip on top of the light front box to secure.
12. Pull out on the light front to ensure it is secure.

Note: If either end of light front is not secure proceed to Step 13, otherwise go to Step 15.

13. Back the 3 1/8" screws out enough to remove the light front.
14. Check for holes in the plywood strip on top of the light front box.
 - There should be one hole in the plywood strip on the light front box for each screw inserted.
 - For any missing holes try one of the following methods:
 - Move the screw closer to the front of the cabinet or
 - Move the screw farther from the outside edge.

Note: Once this is done repeat Steps 8 & 9.

15. Transfer globes and bulbs to the new light front and discard the old light front.